

Easy Reference Guide



Identicom[®]

Refer to this guide at any time for a summary of Identicom key functions and for contact information.

CHARGING

Function:

Keeps your Identicom's battery fully charged.

How to use:

Insert the Identicom mains charger lead into the indicated socket. The battery LED will start to flash.

*When fully charged the battery LED will display a constant **green** light. Your Identicom needs a minimum 2 hours of charging to reach full charge.*

Identicom should be charged for a full 12 hours before first use to condition the battery.

In-car chargers are available from your supplier.



TURNING ON/OFF

Function:

Turns your Identicom On or Off.

How to use:

Press both the highlighted buttons simultaneously for 2 seconds until you feel a vibration. The same action is used to turn your Identicom On - when it will vibrate once and both LED's will flash red; and Off - when it will vibrate twice.

- It is strongly advised that you leave your Identicom on at all times.** Plugging an Identicom into its charger will automatically put the unit in charge mode. Unplugging it will turn the unit back on.



STOP & CHECK

Function:

Use this function to check network coverage and battery strength before entering an increased risk environment.

How to use:

Press the highlighted button for 2 seconds to initiate a check.

The LED lights will flash red before settling on green, amber or red, to indicate network coverage & battery strength.

(This check can take up to 20 seconds.)

Do not rely on Identicom if either LED displays red.

**For GPS Identicoms see the GPS section for blue LED operation*



AMBER ALERT

Function:

*Use **Amber Alert** to pre-record details of your location and/or to initiate an alarm timer on your Identicom*.*

How to use:

*Press the highlighted button for **2 seconds** until you feel three short vibrations. When the **amber LED** lights start to flash you should commence recording.*

* Check with your employer regarding the exact set up of Amber Alert on your Identicom.



RED ALERT

Function:

*Use **Red Alert** at any time when you feel your personal safety is being compromised.*

How to use:

*Press the highlighted button for **2 seconds** until you feel three short vibrations. This will mean the Red Alert has been activated. To cancel a Red Alert, press the button again until you feel two longer vibrations.**

* Check with your employer regarding the exact set up of a Red Alert on your Identicom.



MAN DOWN

Function:

Use Man Down detection to check if you have fallen or collapsed. Identicom can detect tilt, impacts and non-movement.

How to use:

Identicom will detect the man-down scenario, then go through a pre-alert process (vibrating for 2 minutes). Moving the Identicom cancels the pre-alert and man-down process*. If the pre-alert isn't cancelled then a man-down red alert is raised*. Turn the Identicom off or place on charge to ensure the man-down feature isn't accidentally initiated.*

* Check settings with your employer



GPS LOCATION

Function:

In conjunction with “Stop and Check” use to check your GPS location before entering an increased risk environment.

How to use:

Press the highlighted button for 2 seconds to initiate a “Stop & Check”. After the “Stop and Check” LEDs, the signal LED will flash blue, before going solid blue with short vibration when a fix is found (takes up to 2 minutes). You should always perform this function and get your location after turning your Identicom on. GPS requires a clear line of site to the sky, not obstructed by buildings or other obstacles. GPS location will not work indoors.



ESSENTIAL CARE & MAINTENANCE

- Regularly use the 'Stop & Check' function.
It will display two alternating red flashing lights if there is a problem.
- Keep your Identicom clean and avoid unnecessary knocks or drops.
- Identicom is not waterproof, avoid exposure to rain or other wet conditions.
- If you wear your Identicom on a lanyard, remember to check the lanyard plug regularly and replace it whenever it becomes damaged.
- Charge Identicom every 24 hours if you can. Standby time for Identicom is approx. 60 hours (for GPS Identicom approx. 24 hours), talk time is approx. 2 1/2 hours.
If you need technical support, contact your immediate supplier first.

CONTACT DETAILS

Reseller contact details:

Unique Identicom / User reference:

Connexion2 Limited:

Unit 5, Carrera Court
Church Lane, Dinnington
Sheffield, S25 2RG, United Kingdom

tel: 0844 8566606 / +44 1909 518020
email: info@connexion2.com
website: www.connexion2.com